

HP 9000/9050 Maintenance Kit Instruction

The following parts are included in our Maintenance Kits

1 – 9000/9050 Fusing Assembly	RG5-5750
1 – Transfer Charge Roller	RF5-3319
2 – Paper Pickup Rollers	RF5-3340
4 – Feed/Separation Rollers	RF5-3338

>>>WARNING<<<

Turn the printer off. Unplug it, and allow it to sit for 30 minutes before performing these maintenance procedures.

Fuser Removal and Installation:

- Open left side access door.
- Remove duplexer if installed.
- Locate blue levers on each side of fuser and rotate them towards the middle.
- Lift up on handle and slide fuser out of printer.
- Align new fuser and slide firmly into printer until seated.
- Lock the blue tabs into position. *NOTE:* Do not force the levers. If they will not lock, reseal the fuser and try again.
- Reinstall duplexer if needed and close door.

Tray 2 & 3 Pickup/Feed/Separation Roller Removal and Replacement:

- Open tray 2 until it stops. Lift up on outer end and pull tray free.
- Repeat step 1 for tray 3 removal.
- Reaching in through the empty tray slots, pinch tabs on rollers and remove.
- Slide the new rollers onto the shafts until the tabs lock.
- Reinstall paper trays.

Transfer Roller Removal and Replacement:

- Open the front door of the printer and rotate large green lever downward.
- Pinch blue tab and pull transfer assembly out.
- Insert new transfer roller assembly into printer and slide in until it locks into place.
- Press the white button and rotate green lever back up until it locks.
- Close front cover.

Avoid touching Transfer Roller surface when installing

Resetting Maintenance Count:

- Hold down the *CHECK* button while powering on the printer.
- Keep button depressed until all 3 lights are on.
- Use *UP* arrow or *DOWN* arrow key to scroll to “NEW MAINTENANCE KIT”
- Press the *CHECK* button to select.
- Perform steps necessary to return printer to operation.