

HP 4V Maintenance Kit

The following parts are included in our Maintenance Kits

- 1 – HP 4V (BX) Fuser Assembly (RG5-1557)**
 - 1 – Transfer Charge Roller (RG5-1410)**
 - 1 – MP Tray Pickup Roller (RB1-1411)**
 - 1 – Separation Pad (RF5-0302)**
-

>>>WARNING<<<

Turn the printer off. Unplug it, and allow it to sit for 30 minutes before performing maintenance procedures.