

HP 5si/8000 Maintenance Kit Instructions

The following parts are included in our Maintenance Kits

1 – 5Si/8000 Fuser Assembly (RG5-1863)

1 – Transfer Charge Roller (RF5-1412)

4 – Feed/Separation Roller (RF5-1834)

2 – Tray 2&3 Pickup Rollers (RF5-1835)

>>>WARNING<<<

Turn the printer off. Unplug it, and allow it to sit for 30 minutes before performing these maintenance procedures.

Fuser Removal:

- Open the left side door. If duplex unit is installed, remove it by pushing down on the green release lever and pulling it towards you and out of the printer.
- Locate the fuser's left and right blue locking levers. Turn each downwards 90 degrees to unlock the fuser.
- Grab the handles on the far left and right side of the fuser. Lift up slightly and pull it towards you until it is out of the printer

Fuser Installation:

- With the blue lever facing downward, slide the new fuser into the printer and drop it into place.
- Turn the blue locking levers up 90 degrees until they lock into place.
- Locate the gray pressure release levers under blue locking levers and make sure they are in the downward position.
- Reinstall the duplex unit if it was removed in step 1.

Feed/Separation Roller Removal & Replacement

- Pull Tray 2 open until it stops
- Lift the front of the tray up and pull it towards you. It may be necessary to shake it slightly to release the tray from the printer. Do the same with tray 3.
- Locate the four feed/separation rollers with the blue hub inside the printer (two for Tray 2, two for Tray 3). Pinch the tabs together and pull the rollers off of the shafts.
- Remove the four new feed/separation rollers from the bag. Install the new rollers by sliding them onto each shaft until they snap into place. It may be necessary to turn them while doing this.

Transfer Roller Removal & Replacement:

- Open the top cover and remove the toner cartridge
- Locate the blue gear on the far left side of the transfer roller. Gently lift up on this gear until it is free from the retainer clip
- Slide the transfer roller to the left and remove it from the printer.
- Install the right side shaft of the new transfer roller, then snap the left side down into the retainer clip.
- Press down on both sides of the silver and black transfer roller guide until it snaps into place.
- Replace the toner cartridge, close the top cover and plug the printer in.

Avoid touching Transfer Roller surface when installing

Clearing The “Perform User Maintenance” Message on a 5si(if displayed):

- Turn the printer on and wait until “Perform User Maintenance” is displayed.
- Press the **ONLINE** or **GO** button so that its green indicator goes off and “OFFLINE” is displayed.
- Press the **MENU** button until “CONFIGURATION MENU” is displayed
- Press the **ITEM** button once, so that “SERVICE MESSAGE = ON” or “SERVICE MESSAGE = OFF” is displayed.
- If “SERVICE MESSAGE = OFF” press the **SELECT** button so that “*” appears.
- If “SERVICE MESSAGE = ON” press the + button to change **ON** to **OFF**, then press the **SELECT** button so that “*” appears.
- Press the **ONLINE** or **GO** button.

Resetting the Maintenance Count on a 8000:

- Press **ITEM** and **Value** while powering the printer up.
- Display will show “RESETTING NAINT COUNT”; run “CONFIGURATION PAGE” and verify that maintenance count is zero pages since last maintenance.